


SIDE ENTRY 2 PIECE TRUNNION BALL VALVES API6D STANDARD

FS9000
SERIES

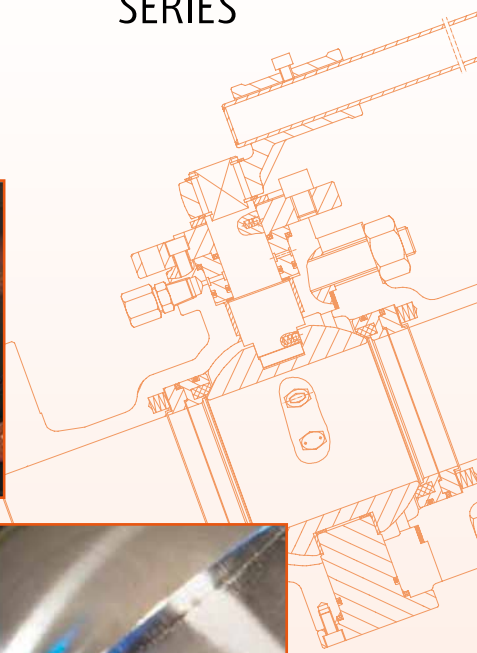

API 622 & ISO 15848-1
Fugitive Emission Certified



API 607 6th Ed. & ISO 10497
Firesafe Certified



**AUSTRALIAN
PIPELINE VALVE®**




AUSTRALIAN PIPELINE VALVE®

COMPLETE PRODUCT LINE

“Australian Pipeline Valve produces isolation, control and flow reversal protection products for severe and critical service media in utility, steam, pipelines, oil & gas and process industries. APV valves and pipeline products form the most competitive portfolio in the market.”



AUSTRALIAN PIPELINE VALVE BRAND RANGE - CATALOGUES

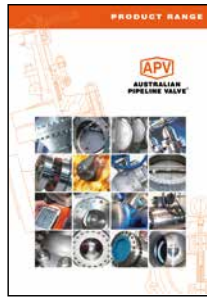


Product Brochure




Ball Valves Floating & Trunnion Mounted




Ball Valves Floating Small Bore

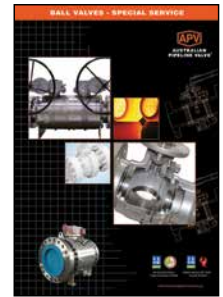

Ball Valves Special Service

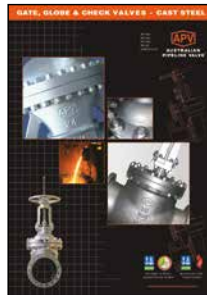


Gate, Globe & Check Valves - Cast Steel

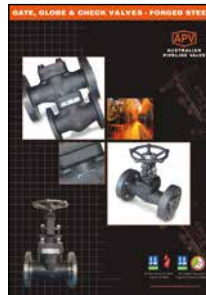

Gate, Globe & Check Valves - Forged Steel



Plug Valves Lubricated, Sleeved & Lined

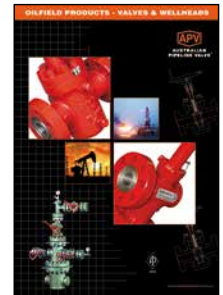


Oilfield Products Valves & Wellheads

APV FAMILY OF BRANDS RANGE - CATALOGUES



Diamond Gear Gearboxes

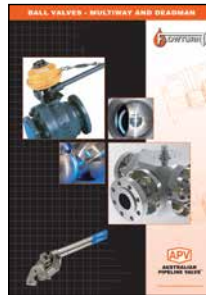

Flowturn Ball Valves Multiway & Deadman



Flowturn Gate, Globe & Check Valves



Flowturn Instrument Valves



Flowturn Strainers & Sight Glasses




Steamco Steam Valves



Supercheck Wafer Check Valves




Superseal Butterfly Valves

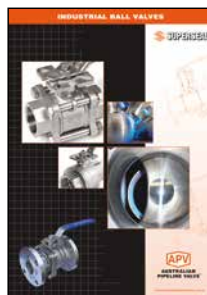


Superseal Industrial Ball Valves



Torqturn Actuators

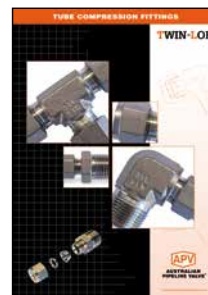

TwinLok Tube Fittings

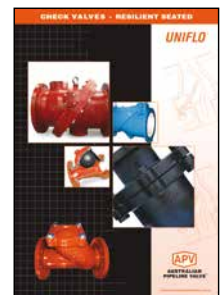

Uniflo Check Valves

Contact us for your local stockist/distributor

INDEX



Introduction	3-4
Safety Information	5-6
1.0 Preservation And Storage	6-7
1.1 Storage	6
1.2 Periodic maintenance during storage	6-7
1.3 Environmental considerations	7
2.0 Installation	7-12
2.1 Valve preparation	7
2.2 Valve installation	7-8
2.3 Maintenance prior to flushing	8
2.4 Flushing the pipeline	8-10
2.5 Maintenance post flushing	10
2.6 Commissioning	11-12
3.0 Valve Removal From Line	12
4.0 Gearbox Removal	12-13
5.0 Valve Disassembly	13-14
5.1 Body	13
5.2 Bonnet and stem removal	13
5.3 Ball removal	13
5.4 Seat and spring removal	14
6.0 Inspection And Repairs	14-15
6.1 Body and bonnet	14
6.2 Seat and seat housing	14
6.3 Soft seat insert (only for valve with soft seat insert)	14

SIDE ENTRY 2P TRUNNION BALL VALVES API6D STANDARD - FS9000 SERIES

6.4	Seals	14-15
6.5	Spring	15
6.6	Bearings	15
6.7	Ball	15
6.8	Stem seal and stem	15
6.9	Bolts, nuts and threaded components	15
7.0	Valve Assembly	16-17
7.1	Valve lubrication	16
7.2	Seat and spring assembly	16
7.3	First adaptor assembly	16
7.4	Ball, support, bonnet and stem assembly	16
7.5	Gearbox mounting to valve	16
7.6	Pressure test	16-17
8.0	Operation And Maintenance Instructions	17-21
8.1	Operation instruction	17
8.2	Lubrication	17-18
8.3	Valve operating	18
8.4	Maintenance schedule	18-19
8.5	Double block-and-bleed	19-21
9.0	Automatic Over Pressure Relief	21
10.0	Overview Design Features	22
Appendix 1 - Bolting torques		23-24
Appendix 2 - Label details		24
Appendix 3 - Design features		25-26
Appendix 4 - Typical bill of materials		27-29

INTRODUCTION

The majority of this information is common knowledge to experienced steel valve users. When properly installed in applications for which they were designed, APV valves will give long trouble free service. This instruction is only a guide for installation, operation and minor maintenance. A professional APV approved valve engineering facility should be utilised for reconditioning and minor repairs.



Note

We do recommend that this entire document be read prior to proceeding with any installation or repair. Australian Pipeline Valve and its parent company take no responsibility for damage or injury to people, property or equipment. It is the sole responsibility of the user to ensure only specially trained valve repair experts perform repairs under the supervision of a qualified supervisor.

RESPONSIBILITY FOR VALVE APPLICATION

The User is responsible for ordering the correct valves. APV Valves are to be installed in the observance of the pressure rating and design temperature. Prior to installation, the valves and nameplates should be checked for proper identification to be sure the valve is of the proper type, material and is of a suitable pressure class and temperature limit to satisfy the applications requirements.



Caution

Do not use any valve in applications where either the pressure or temperature is higher than the allowable working values. Also valves should not be used in service media if not compatible with the valve material of construction, as this will cause chemical attacks.

RECEIVING INSPECTION AND HANDLING

Valves should be inspected upon receipt to determine:

- Compliance to purchase order requirements.
- Correct type, pressure class, size, body and trim materials and end connections (this information may be found on the nameplate or may be stamped on the body of the valve).
- Any damaged caused during shipping and handling to end connections, hand wheel or stem.



Caution

The End User is advised that misapplication of the valve may result in injuries or property damage. A selection consistent with the particular performance requirements is important for proper application and is the sole responsibility of the end user.

CONSIDERATIONS OF TECHNICAL RISK/ LIMIT OF LIABILITY TO CLIENT FOR BALL VALVES

Australian Pipeline Valve don't consider in our design the following factors of risk:

1. Australian Pipeline Valve 'Standard' ball valves can be used in a temperature range between -28.8 to +200°C. (Note, pressure limitations apply above 38°C refer to Pressure/Temperature charts.) For service temperatures below -28.8°C ball valve construction materials shall be submitted to an impact test at the minimum service temperature. For temperatures outside of the range of -28.8°C to +200°C ball valves have to be provided with seats, seals and body material able to withstand the temperature degree required.
2. The onus is on the customer to specify all materials of construction and service conditions. Australian Pipeline Valve shall assume standard materials and conditions if not otherwise specified.
3. Australian Pipeline Valve 'Standard' ball valves are not equipped with devices suitable to avoid internal over-pressures caused by incorrect operations of process or by-fluids & liquids subjected to an increase of volume and/or pressure (these devices, such as the over-pressure hole in the ball or safety seats are available upon request).
4. Australian Pipeline Valve 'Standard' ball valves are not designed with special devices to withstand a sudden thermal jump (thermal shock).
5. In general Australian Pipeline Valve 'Standard' ball valves are not mechanically designed to bear overloads due to exceptional atmospheric or natural phenomenon's (such as earthquakes).
6. In general Australian Pipeline Valve 'Standard' ball valves are not designed to bear loads on flanges, on pipe connections or pipeline.
7. In general Australian Pipeline Valve 'Standard' ball valves can't withstand ice inside their bodies (in this case user must specify the optional stem extension for insulating, avoiding the presence of residual product inside the valve).
8. Australian Pipeline Valve 'Standard' ball valves are not suitable for low temperature service below -29°C (-20°F) unless provided with cryogenic stem extension and other modifications (available on request).
9. Australian Pipeline Valve 'Standard' ball valves are suitable for 'industrial' oxygen (not medical) service when supplied degreased and packed in polyethylene bags only.
10. The compatibility between ball valves construction materials and medium is selected by the user. The user is ultimately responsible for verifying the compatibility between medium and materials.
11. Abrasive or dirty service, high temperature service, low temperature service, vacuum service, near zero pressure service and other special applications should be clearly stated when requesting quotation.

BALL VALVE START-UP

Before installing the ball valve onto the pipe-line it is mandatory for the user to verify the compatibility of the ball valve with service conditions (medium, temperature and pressure). With reference to standard ball valves held in stock the reseller and end user will have to assure themselves of the compatibility with the use of conditions required by the customer. Australian Pipeline Valve ball valves must be only used for on-off (fully open/fully closed) service.

Before using the ball valve in a potential explosive atmosphere it's necessary: -

- To verify the compatibility between the ball valve and the zone in which the ball valve should be installed.
- To foresee the pipe-line ground condition on which the ball valve should be installed.
- To check that the temperature of the ball valve surface is not higher than the flammable point of the atmosphere in which the ball valve is installed (in this case specify an insulating cover device for the valve and an extension for the wrench)
- Before installing ball valves with welding ends to make sure that the process of welding is carried out in accordance with all the safety requirements of the classified zone.
- To avoid mechanical knocks during the installation that may cause sparks.

Australian Pipeline Valve cannot be held responsible for damage caused by use of the product especially if it is improper use or modified.

SAFETY INFORMATION

The following general safety notices supplement the specific warnings and cautions appearing elsewhere in this manual. They are recommended precautions that must be understood and applied during operation and maintenance of the equipment covered herein. This manual provides instructions for storing, general servicing, installation and removal of ball valves.



Caution

Do not attempt to disassemble a valve while there is pressure in the line. Make sure both upstream and downstream pressures are removed. Disassemble with caution in the event all pressures are not relieved. Even when replacing packing rings, caution is necessary to avoid possible injury.



Caution

To prevent valve distortion, inefficient operation, or early maintenance problems, support piping on each side of the valve.



Caution

- *A valve is a pressurised device containing energised fluids and should be handled with appropriate care.*
- *Valve surface temperature may be dangerously too hot or too cold for skin contact.*
- *Upon disassembly, attention should be paid to the possibility of releasing dangerous and or ignitable accumulated fluids.*
- *Adequate ventilation should be available for service*



Caution

Do not use the ball valve in process conditions where the pressure, temperature, media and other technical conditions exceed the limitations set by the valve's specifications. When handling fluids that could cause damage to human health, the environment or property, the necessary safety precautions to prevent risks must be taken.

APV and its resellers refuse any liability for damage to people, property or plant as well as loss of production and loss of income under any circumstances but especially if caused by: Incorrect installation or utilisation of the valve or if the valve installed is not fit for the intended purpose. It is the sole responsibility of the client to ensure the valve type and materials are correctly specified.

DURING OPERATION BEAR IN MIND THE FOLLOWING WARNINGS:

- a- The graphoil packing and body gasket is very brittle: any twisting or bending shall be avoided.
- b- The internal parts of valves (ball, stem, seats) shall be handled with care avoiding scratches or surface damage.
- c- All tools and equipment for handling and supporting internal critical sealing parts shall be coated with soft materials.
- d- Seats & seals usually include Viton, Devlon & Teflon, hence high temperatures and some chemicals will damage sealing components.
- e- Never part open valve, valve must be fully open or fully closed or else the seats will be damaged.

For all operations make reference to position number on part list of the applicable drawing. The drawing in the Appendix is a general drawing only, for more accuracy refer to the as-built drawings supplied with the order.

1.0 PRESERVATION & STORAGE

1.1 STORAGE

- a- If storage in the field for a long time before installation is necessary, it is suggested to put valves in a dry and/or covered place. In this case the packaging and end covers integrity is especially important.
- b- All the valves are supplied with special plastic ends to cover and protect the internal parts. We recommend you do not remove them during storage period.
- c- Valves should be left in the open position (unless actuated and set fail closed).

1.2 PERIODIC MAINTENANCE DURING STORAGE

In case of extended storage, the valves must be inspected and maintained as follows:-

- External surfaces must be inspected to ensure no damage to flange faces, paint finish etc. In case of the presence of rust and/or damaged painting, the area must be cleaned by brushing, degreasing & repainting.
- The protection must be restored following the instruction indicated from APV in accordance with the painting cycle used.
- Without any ball movement, the internal surface of the valves must be inspected to check the complete absence of dust, rust, foreign matters and the integrity of lubricant coat. If not satisfactory then clean and lubricate the internal part using a nebulised lubricant. Do not leave any lubricant on the seat itself or else the seat may attract debris which can then damage the seat.
- After cleaning, the ball must be operated (close/open complete stroke).
- The ball must be kept in the full open position during installation.
- The end of the valve must be protected using the same end covers.

- We recommend you tropicalise bore and ends of valves if stored in humid or salt air environment. Grease bore with valve full open so no grease is applied to soft seat inserts.

1.3 ENVIRONMENTAL CONSIDERATIONS

According to ISO 14000 regulations and the environmental policy of APV the recyclability of the components that form part of APV valves is as follows:

Recyclable components:

Metal parts, PTFE (hard), plastic plug (low-density polyethylene).

Non-recyclable components:

PTFE mixed with other compounds (glass-fiber, graphite, etc.), nylon, graphite and graphite mixed with metal.

2.0 INSTALLATION

2.1 VALVE PREPARATION

- a- Remove the ends protectors and check accurately the status of the valve as indicated in point 1.2.
- b- Prior to shipment, a preservative/corrosion inhibitor may have been applied to the inner body of the valve. This preservative/corrosion inhibitor can be removed with a solvent, provided the solvent used does not affect the seats/seals used in the valve.
- c- Do not operate the valve until the following procedures have been fully applied:
 - Clean internal conduits.
 - After cleaning the ball must be operated (one complete stroke).
 - During installation the ball must be kept in the fully open position.

2.2 VALVE INSTALLATION

- a- To handle the valve use body lugs if applicable or suitable eyebolts. Never handle the valve by yoke or using the lever or actuator or gear box eye bolts. Never lift from bore of valve. Do not lift the valve using only one lifting lug.
- b- The end protectors must be removed only immediately before installation. If one of end is not connected to the line for a period of longer than half a day the opened end shall be securely sealed with plastic or wooden cover.
- c- For butt weld type valves take care for the following: If brushing or grinding, seal valve conduit (bore) to prevent damage. At the end of such operation clean accurately the conduit. The welding procedure and post-weld treatment shall be performed taking into account the allowable maximum temperature for seats and seals. The welding sequence shall be pre-planned in order to give an acceptable piping load to the valve. Leave valve in full open position to reduce temperature transmission to soft seats for valves up to 80 NB (3") use temperature measuring strips. Ensure temperature of body does not go above 180°C.

- d- At the end of installation lock the valve full open in order to avoid any movement of the ball before flushing the pipeline.
- e- Valves will operate at any angle horizontally or vertically, although it is recommended you install valves in a vertical position with stem pointing upwards for ease of operation, inspection and accessibility.
- f- Ball valves are usually bi-directional, and therefore may be installed in either direction. In some cases, ball valves such as 'metal to metal' and low temperature valves may be unidirectional, in which case the direction of flow will be indicated on the valve body.







Note

If the ball valve is equipped with a test connection port, make sure that it is fully closed before pressurising the valve.



Caution

Local safety regulations must be complied with for transport to the place of installation. Make sure that the valves cannot tilt or slip in any way (see figure below).

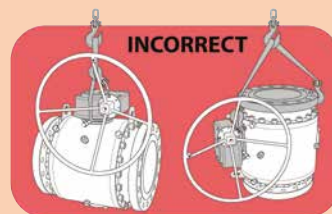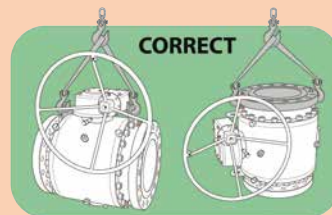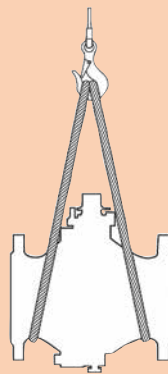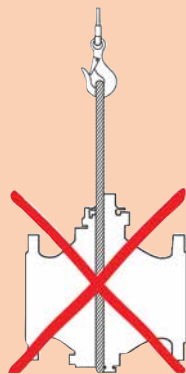

2.3 MAINTENANCE PRIOR TO FLUSHING

- a- If the period between installation and flushing of the of the pipeline is longer than six months a preventative maintenance operation is suggested.
 - Lubricate the stem with fluid protective oil through the stem injector (if applicable). Do not grease lubricate seats as grease may attract debris and damage seats.
 - Remove valve from line and remove any debris and reflush.
 - Filters or strainers should be installed upstream of soft seated valve to prevent seat damage.

2.4 FLUSHING THE PIPELINE

Flushing washes away all welding slag, dirt, sand, solids and debris collected in the pipelines during construction prior to turning the valve and potentially damaging the soft seat. Flushing, where deemed

necessary, is the most dangerous activity for the valves, and it happens before they are put to service. Whilst ball valves are normally not lubricated, should it be required to flush potential debris (or lubricate sticky valves) a different practise to the lubrication of either a gate valve or plug valve should be employed. We recommend the following: -

1. Find a good grease for natural gas or your service. The grease must be insoluble. It must be resistant to breakdown or shearing of the gel structure under high pressure injection and under the pressure between seating surfaces. It must be stable over a wide range of temperatures, and not freeze. It must not react chemically with the fluid and become solid, or rubber like (i.e. polymerize). Depending on the service, the best greases are fully synthetic; if you have any doubt or concern, consult a valve maintenance expert. Field experience has shown that greases and sealants may cause severe problems with the seat and seal arrangement if used regularly during preventative maintenance. If a non-leaking ball valve is lubricated with an adhesive grease/sealant, the floating, spring loaded seats can become stuck within their seat pockets. When the ball floats due to a pressure differential across the valve, the seals cannot track the ball and leakage can occur. Grease manufacturers produce low viscosity synthetic ball valve lubricants such as Clare UK "601-Fluid". Such light greases offer the following advantages to heavier emergency sealant greases and cheaper brands of light greases: -
 - Enhanced resistance to hydrocarbon fluids and gases.
 - Will not dry out or form a gum like some other greases when used within its application temperature range.
 - Will not disrupt the operation of the seat and seal arrangement.
2. Use an appropriate high pressure grease-injection pump, capable of overcoming the pipe pressure and the high pressure build-up caused by the grease itself, during it's injection in the grease passages.
3. Inject a generous amount of grease in the seats before flushing. The object is to cover them all and to fill the groove between seat carrier and ball with grease. The dirt will get stuck to the grease during flushing, but it will not come inside. And before turning the valve for the first time, inject again a small amount of grease into the seats. A little is enough (1/4 of the normal quantity per seat, see 8.4.1). The dirty grease will be pushed into the pipe by the fresh grease, and the turning action of the ball will drag fresh grease towards the seats, not dirty grease.
4. Do not turn the valve during flushing.
Of course, be warned any type of grease, especially synthetic grease can become hard or sticky causing torque problems and seat spring jamming in which case a line flushing agent like Clare 601 Valve Cleaner may be required. Of course, for leaking seats a heavier sealant like Clare 601 lubricant must be used for temporary emergency sealing.



Caution

Beware of greases made of synthetic oil with a mineral thickener. The natural gas (or storage prior to use) washes away the oil, leaving the thickener behind. The thickener is like a powder that caulks or bakes hard on the seats, increasing the operating torque. Always wipe the seats clean as much as possible prior to installation. The increased torque may effect pneumatic actuated valves.



Note

Do not operate the valve during flushing or entrained particulates could damage soft seat or enter stem or seat pocket area.

2.5 MAINTENANCE POST FLUSHING

- a- At the end of flushing operation it may be possible to leave the line full of test fluid and in this case no intervention is required. If the line must be drained proceed as follows:
- Make sure that the valve is in full open position.
 - Open plugs and drain it completely. Observe safety plant procedures prior to opening any body plugs in case any remaining fluid or gas is pressurised or trapped in body cavities.
 - After draining flush the cavity of valve through the vent plug. Consult an expert on use of special excavation procedures.
 - Lubricate the stem with fluid protective oil or grease through the injector (if applicable). (Seat lubrication is normally only required for emergency purposes not for ongoing maintenance).
 - Completely tighten all drain and vent plugs. Consult your plant safety procedures and only perform work under supervision of expert valve maintenance personnel.
- b- Operate the valve at least 2 times (complete closing and opening operation).
- c- Repeat the operation every 6 months if the pipeline is not used.
- d- Always get authorisation to partially operate an in-service valve.



Caution

Personal injury may result from sudden release of any process pressure. APV recommends the use of protective clothing, gloves and eye wear when performing any installation or maintenance. Never unscrew sealant injection nipples from body, seats or stem, as these outlets are exposed to full line pressure and only the in-built check valve in the sealant nipple itself isolates the pressure. Similarly the body drain and vent valve plugs are exposed to full line pressure if opened.



Caution

Natural gas is not usually clean. Natural gas may carry condensates and dirt that gets trapped in the valves, and may damage the internal parts. Also, operation of the valves becomes more difficult. It is true that plant sites do install filters in their system, but experience has proven that no system is perfect. The internal parts of the valve can be partially protected using judicious amounts of grease to fill the cavities. However, other than when flushing (see 2.4.3) or if there is seat leakage, or if valve cannot be opened, no grease should be applied via seat sealant injectors to soft seats as it will attract debris and cause damage. A soft seated valve is always at risk if service is not clean.

2.6 COMMISSIONING

The first year of operation is crucial, because when the pipe is put into service, all debris is pushed downstream, and contaminates the valves along its travels. With time, the pipe gets cleaner and initial problems disappear. Strainers or filters should be installed upstream of all soft seated valves.



Note

Remember that ball valves in natural gas service are like the human body; they need 'exercise'. Keep moving them and lubricating them, and you will have fewer problems. Do not let them have a sedentary life.

The same recommendations regarding grease injection for flushing (see 2.4) apply for commissioning. By refilling the grease channels multiple times, the dirt is gradually pushed out of the seats. Provided that the grease is properly chosen (see 2.4), it will not damage the valve, and to a certain extent will shield the seats from contamination. Regular cycling is also important, for two reasons: to prevent the seats from getting stuck, and to distribute fresh lubricant over the seating surfaces of the ball and seats. Once the seat is greased, it is a good idea to pump fresh grease into the seat to expel any debris laden grease (see 2.4.3) before cycling the valve to avoid damage to soft seat inserts. Many operators prefer not to grease seats even during commissioning as the grease can attract debris which can damage the seats if the valve is then turned. Also grease channels can become blocked if grease hardens. However, if the service is dirty the seats will damage either way hence many users find regular greasing delays the damage. Should you need to apply grease to seats, ensure you then inject fresh grease to dispel any grease which may have attracted contaminants and then partially stroke the valve multiple times to remove as much grease as possible from the seats. After commissioning, once you believe the service is clean you can inject a suitable grease line flushing agent and then partially stroke the valve again. You should consult a valve maintenance specialist as different service, media, pressures, temperatures, etc., can require totally different practises. APV recommends the following programme for start up: -

1. For the first year, inject a small amount of grease into the seats before turning the valve, every time.
2. Cycle the valves periodically as follows:
 - For the first month, every week.
 - For the second month, every two weeks.
 - For the third month, every month, for at least 6 months.
 - Then every three months.

Depending on the type of seat inserts and type of particulates encountered in the media, after commissioning it is best to only use the seat lubrication nipples for emergency use as it is possible that grease on the seats will actually attract debris which can then damage the seats during closing or opening. Nylon and Devlon are hard and resistant to scratching, PEEK® is even harder. Teflon® (PTFE) is softer and scratches easier yet it can have more resilience and 'memory' in terms of resistance to permanent indentations. Also note, PEEK seated valves have a higher operating torque. Teflon has the lowest operating torque, however it has more 'memory' and if left closed for a long period of time the

torque required to unseat it will increase. Teflon is not suitable for larger sizes and higher pressures. Regardless of soft seat material, valves need to be regularly partially stroked to prevent sticking of seats and accumulation of entrapped debris. However, all soft seated valves are only suited to clean service applications.

3.0 REMOVAL FROM LINE

It is desirable that the maintenance operations are carried out by skilled personnel who are experienced and well trained in standard field techniques and procedures. Be sure that the personnel involved in such operations are aware of fundamental safety rules indispensable for the protection of their own and other people's safety. Ball valves are field maintainable, hence to carry out normal maintenance (stem lubrication, stem packing substitution, seat lubrication) it is not necessary to remove it from line (seat lubrication is only for emergency purposes not for maintenance).

If it is required to remove the valve from the line proceed as follows:

- a- Ensure the line is fully depressurised.
- b- Partially open the ball in order to depressurise the valve.
- c- Remove the drain plug and vent plug. First release vent to ensure no remaining pressurised gas or fluid trapped in cavity. Take safety precautions to avoid personal injury during this procedure. Then carefully remove drain plug once you are sure valve has no remaining fluid or gas in cavity.
- d- Keep the ball in the fully open position.
- e- Remove the valve from the line. The valve shall be handled by means of lifting lugs fitting on the valve (if applicable). Standard field techniques and procedures are satisfactory to disconnect it from the line.
- f- After removal of the valve from the line, clean the valve and seal the ends with plastic or wooden covers.



Caution

Stem seal body leakage can result in personal injury. If the valve has an adjustable gland packing, then tighten it if a leak occurs in the stem area. Some sizes & classes have a triple barrier internal stem seal and cannot be 'adjusted' like a gland packed ball valve. In an emergency if tightening gland packing nuts (where fitted) fails, injecting grease into the grease sealant injection nipple fitted to stem (where fitted) may temporarily cause the leakage to cease (refer 8.2) but the valve should be removed from the line for repair as soon as possible.

4.0 GEARBOX REMOVAL

- a- Removal (refer to enclosed drawings)
 - Unscrew the bolts/nuts.
 - Lift the gear box to disengage the valve stem and remove it with the plate.
- b- Put in position a removable cover to prevent the introduction of dust, sand, etc in the actuator bushing.



Note

The actuator or gearbox position stops have been properly set in the shop. Do not alter the setting.

5.0 VALVE DISASSEMBLY

The following should only be performed by an APV approved repairer!

Note, The below parts refer to the general drawing in Appendix 1. This is a general overview drawing only. Each size & class range does vary so refer to the actual as-built drawing.



Note

(only for ENP ball): - Keep in mind that if electroless nickel plating is damaged the ball will require replacement or re-machining and re-plating.

5.1 BODY

- a- The valve shall be supported adequately leaving the adaptor part no. 02 free.
- b- Unscrew adaptor flange nuts part no. 31.
- c- Remove adaptor part no. 2 sliding parallel to the through conduit valve axis.
- d- The above mentioned operation must be performed taking care of the O-ring and fire gasket integrity.

5.2 BONNET AND STEM REMOVAL

- a- Remove the actuator or gearbox from it's support part no. 17.
- b- Remove the gasket part no. 11 and o-rings part no. 25, 26, 27.
- c- Remove the stem part no. 07 sliding parallel through the bonnet.



Caution

Check the stem sealing area for pressurised process fluids even after the valve has been removed from the pipeline, particularly when removing packing hardware or sealing rings, or removing packing box fittings.

5.3 BALL REMOVAL

- a- Remove the ball part no. 03 and the support part no. 10 through the lateral port.

5.4 SEAT AND SPRING REMOVAL

- a- Seats are easily removable from lateral flanges.
- b- Ensure the flanges are on a horizontal plane.
- c- Lift the seat-ring part no. 06.
- d- Remove and clean the springs part no. 24.

6.0 INSPECTION AND REPAIRS

The following inspection and maintenance procedures of valve components should be performed by a professional valve repairer. Replace any parts that are damaged with genuine APV spare parts.

The sampled drawing in Appendix 1 is used as an example to reference parts. However, the Bill of Material varies according to size, class & trim, hence refer to as-built drawing.

6.1 BODY AND BONNET

- a- Clean accurately inside the body. The surfaces shall be free of rust, scale, dirt etc.
- b- Clean accurately the body seats with kerosene removing any dirt.
- c- Any local scratches shall be smoothed with emery cloth.
- d- Inspect bonnet gasket status and replace if damaged.
- e- Lubricate gasket area and matching surface with an appropriate thin film of grease.

6.2 SEAT AND SEAT HOUSING

- a- Seat housing shall be free of rust, scale, dirt, etc.
- b- After cleaning lubricate accurately the seat housing with a thin film of grease.
- c- Repeat the operations a & b for the second seat-ring and gasket. Check in particular the status of the seat surfaces in contact with the ball. Clean accurately and smooth eventual small damages using emery cloth. Any deep scratch crossing the whole sealing area shall be cause for rejection.

6.3 SOFT SEAT INSERT (ONLY FOR VALVE WITH SOFT INSERT)

- a- The soft insert shall be free of damages otherwise the seat shall be replaced.

WARNING: due to the specialised manufacturing process, the performance of the seat insert is guaranteed only if manufactured by APV. Do not attempt to press in a new after-market seat insert.

- b- A client made refurbished part will void the warranty.

6.4 SEALS

- a- Clean and check the gasket's status and repair/replace them if damaged.



If a gasket or seal is disturbed while removing or adjusting soft parts, APV recommends installing a new gasket or seal. A proper seal is required to ensure optimum operation.

6.5 SPRING

- a- Remove and clean the springs part no. 24 with kerosene or similar solvent.
- b- Fill with grease the spring holes on the seats.
- c- Check the springs function properly.
- d- Assemble the springs on the seats, be careful to avoid any damages to the seat gasket.

6.6 BEARINGS

- a- The surfaces of the bearing shall not exhibit any signs of scratches or deep abrasion.
- b- If necessary the bearing can be removed acting with the proper tool (screwdriver or chisel) between bearing wall and ball.
- c- The new bearing can be forced into the housing.

6.7 BALL

- a- Clean the ball, check accurately the surfaces in contact with the seats and bearings.
- b- Any damages of the surface must be eliminated by polishing with emery dust. Any deep scratch crossing the whole sealing area shall be cause for rejection.
- c- Lubricate accurately all the surfaces with a film of grease.

6.8 STEM SEAL AND STEM

- a- Clean the stem surfaces and check in particular the portion in contact with gaskets.
- b- The stem shall be free of abrasion, scaling or scratches.
- c- Lubricate accurately with the grease.
- d- Check seals and replace them if necessary.

6.9 BOLTS, NUTS AND THREADED COMPONENTS

- a- All bolts, nuts, and threaded particulars shall be cleaned with kerosene, dried and lubricated with protective oil. The body bolts should have a copper based anti-seize grease applied. To ensure grease does not dry or wash out and does prevent corrosion protective plastic nut caps with grease nipples are available.
- b- The threads should be visually inspected to verify the integrity of the components.

7.0 VALVE ASSEMBLY

The sample drawing in Appendix 4 is used as a reference, however, refer to actual as-built drawing as the Bill of Materials varies depending on size, class and trim.

7.1 VALVE LUBRICATION

For components that need to be lubricated use grease IP Bimol Grease or similar.

7.2 SEAT AND SPRING ASSEMBLY

- a- Put the spring part no. 24 into proper housing on the seats part no. 06.
- b- Be sure that the flange/body seat area is properly lubricated and position it on a horizontal plane.
- c- Insert the o-rings part no. 28 and the fire safe gasket into the grooves of the seat ring part no. 15.
- d- Lower the seat ring into the body/flange cavity. Be careful to avoid damaging the gasket.

7.3 ADAPTOR ASSEMBLY

- a- Assemble the adaptor part no. 02 with the body.
- b- Screw studs part no. 30 and tighten the nuts part no. 31 (ensure they are pre-greased as per 6.9).
- c- Refer Appendix 1 for Bolting Torques.

7.4 BALL, SUPPORT, BONNET AND STEM ASSEMBLY

- a- Assemble the bearings part no. 19, the O-rings part no. 25, 26, 27 and the gasket with the bonnet part no. 11.
- b- Introduce the stem part no. 07 into the bonnet. Be careful to maintain the stem in the same axis of the bonnet.
- c- Assemble the ball part no. 03 with the bearings part no. 19 and support part no. 10 and insert the ball in the lateral body cavity.
- d- Insert the stem and the bonnet in the ball, through the upper port of the body. Make sure that the stem groove of the key is along pipeline direction, with the ball in the fully open position. Screw and tighten the stop screws part no. 38.

7.5 GEARBOX MOUNTING TO VALVE

- a- Assemble the gear support with the valve.
- b- Insert the actuator/gear on the support with the valve.
- c- Screw and tighten the studs/nuts actuator.

7.6 PRESSURE TEST

- a- Move the ball in the half position.
- b- Pressurise the valve body. The body hydrostatic test should be performed at a pressure 1.5 times the maximum rating pressure in accordance with API6D.

- c- With the ball in the fully open or closed position the maximum seat hydrostatic test pressure should be performed at a pressure 1.1 times the maximum pressure rating in accordance with API6D. In addition a low pressure pneumatic test of 700KPA should be performed in accordance with API6D. Seats should be tested bi-directionally.

8.0 OPERATION & MAINTENANCE



Caution

The valve is only intended to block or allow flow through the pipeline. The valve should only be used in either fully open or fully closed position. Do not use this valve to regulate flow by partially opening or partially closing the valve. The valve should not stay in a semi-open or semi-closed state for more than two minutes.

8.1 OPERATION INSTRUCTION

- a- Hand wheel and gear operated ball valve have to be fully opened and closed to check the valve is correctly operating.
- b- In the case of automated valves, the instructions from the actuator's manufacturer shall be supplied separately. In this case, automated valves shall be operated with the required energy source (electric, pneumatic, hydraulic) to check correct functioning.
- c- Do not change any settings such as position stops or speed or torque governing devices.
- d- Ball valves are provided with:
- Thrust and radial PTFE/steel bearing;
 - Contact surface between ball and seats is anti-wearing and self lubricating. Hence no lubrication and maintenance activity should be required. Hence since the valves normally operate with industrial fluids and gases which could have a range of impurities, a preventative maintenance program is required as part of plant management procedures.

8.2 LUBRICATION

- a- Ball valves require no lubrication for normal operation. If required, it's possible to lubricate the stem and the seats through emergency sealant injection grease-check valve where required when these nipples are provided. This is only in the event of leakage or if valve is difficult to open. The stem injection nipple can be optionally greased to ensure ease of operation especially for automated valves. If no leakage, it's not required or advisable to lubricate seat sealant injection nipples as the grease may attract debris which could damage the seats longer term. See 8.2b below if seat lubrication is desired or required. Never unscrew complete sealant injection nipples from body as they are under line pressure. Always replace protective caps where fitted to sealant nipples after use.
- b- Some end users prefer to lubricate/grease the valve seats at injection points on the seats of the valve located on the valve body. Quantity of grease required can vary greatly depending on the valve size, cycle frequency and service condition. As a general guideline use 30 ml (1 ounce) of lubricant per inch size of valve into each seat fitting. Use proper lubricant/grease for your line media application to ensure

resistant and compatibility to media and temperature flowing through the line. See 8.4.1 for emergency seat sealant if seats leak.

c- Also see 8.4.1 for emergency seat sealant injection procedures.

8.3 VALVE OPERATING

a- It is advisable, where possible (especially if valve is an actuated ESDV), to move the ball periodically in order to prevent any hard scale or memory lock between ball and seat.

b- Partial operating (at least about 5% of the total stroke) every 6-12 months will ensure a good life of seats and ball. This will ensure the valve functions and will prevent seizure/galvanisation of any mating surfaces. Duration depends on service, criticality, etc. However, it also must be factored in that if there are impurities or particulates in the line each operation could reduce seat life proportionately. However immediately fully re-open or fully re-close the valve as partial opening for more than a few minutes will damage the seat.

c- Before operating with the valve completely open or closed it is advisable to lubricate the internal components as per point 2.4.3 and 2.6.

8.4 MAINTENANCE SCHEDULE

ESTABLISH INTERVALS ACCORDING TO PLANT REQUIREMENTS.

a- Stem packing or seal leakage. In case of leakage from stem seal or packing proceed first to inject sealant through the sealant nipple where provided (see 8.4.1 below). If it does not stop the leak, the stem gland seal must be replaced.

b- Body-adaptor leakage. If leakage from body and adaptor join occurs, it is necessary to replace the body gasket.

c- Seat leakage. In case of leakage from seat rings it is possible to inject special silicon grease into emergency seal injection nipples (see 8.4.1 below). Be sure that the grease pump employed for this intervention is able to give a pressure higher than the pipeline pressure.

8.4.1 Emergency Sealant Injection Procedure

A sealant is a heavy grease-like substance used to stop small leakages through sealing surfaces. A slightly damaged or scratched sealing surface can still close if some sealant is injected. Sealant injection is intended for temporary emergency situations, where a major valve overhaul to replace the seats is not possible.

Sealant is injected through the grease fittings (36) located in the valve body, near the seat area. Grease fittings are not fitted on all valves as some clients prefer not to have them to prevent the possibility of applying grease unnecessarily which can then attract debris and damage the seat. In smaller size valves there is only a body sealant injection. In this case the valves must be full open during injection, more grease is required as the valve cavity must first fill, then stroke the valve in order to wipe the grease onto the seats. Then repeat the procedure. For normal lubrication see 8.2.



Caution

Sealant injection is a temporary measure, remove the valve at first opportunity and repair. Greasing the seats can then attach more debris onto the seats so only grease in an emergency unless flushing with light grease as detailed in section 2.4.

In most cases, sealant injection in the upstream seat will be enough to stop a small leakage. However, it would probably be necessary to inject sealant each time the valve is operated to keep leakage under control. If standard grease does not work there are many PTFE composite greases with advanced sealing capabilities available.

The procedure for injection of sealant in the seats is as follows:

1. Before injection of sealant, ensure that the ball stops are not out of alignment. A small misalignment of 2 or 3 degrees may open the bore hole to the line pressure, causing continuous leakage.
2. Use an appropriate high pressure sealant-injection pump, capable of overcoming the pipe pressure and the high pressure build-up caused by the sealant itself, during its injection in the sealant passages.
3. Confirm that the ball is in the closed position (unless, as is sometimes the case with valves 80NB (3") and under, the valve has a single sealant nipple only on body cavity, then it must be in full open position, see 8.4.1 paragraph 2. Otherwise, the grease will go down the pipeline and the whole procedure will not be effective.



Caution

When removing the safety cap of the grease fitting, be careful not to unscrew the complete grease fitting out of the body, because it is under pipe pressure. Use a back-up wrench.

4. Remove the safety cap of the grease fitting.
5. Start injecting a light grade sealant. If you do not succeed, gradually work up to heavier sealants.
6. Recommended quantity is 29 cc (1 oz) of sealant per inch of valve size per seat ring, without considering the quantity required to fill pump and hoses.
7. Inject only enough sealant to stop the leakage. An excess of sealant is wasteful, and contaminates the installation downstream.

APV ball valves optionally feature another sealant injection point in the shaft area (see Appendix 3), to help stop leakage through the O-rings located there. The quantity of sealant required is proportional to the diameter of the shaft (much smaller than the amount required in the seats).

8.5 DOUBLE BLOCK-AND-BLEED

Whilst trunnion ball valves are double block & bleed capable, the valve needs to be ordered and tested as a double block & bleed valve and fitted with a drain valve. A special drain ball valve should be specifically fitted to the lower drain plug.

The pressure trapped in the body cavity can be vented to the atmosphere while pressure, is maintained in the pipeline, both in the fully open and fully closed positions.

This characteristic is used to:

1. Ensure that the seats are providing an effective seal.
2. Drain or flush the body cavity of an in-service ball valve.

8.5.1 Venting Procedure

1. Operate the valve to fully open or fully closed position, whichever is more convenient for you.
2. Turn loose the head of the vent fitting if fitted (22) located at the top of the body, to release cavity pressure.



Caution

Use extreme caution when venting the body cavity of a pressurised valve.

Continue venting until body cavity pressure is atmospheric. It will take some time to depressurise the body cavity. It depends on the size of the fitting, body cavity pressure and field compressibility.



Caution

If the body cavity keeps venting fluid at a constant flow rate for a very long time, it is a signal of bad sealing of the valve seats. For liquid service only a lower drain valve will immediately indicate a leak.

8.5.2 Draining Procedure

The purpose of draining the body cavity is to bleed out all the liquid collected in the body cavity. Even in gas service, some condensate, compressor oil and other residues may get trapped in the body cavity after a while. We recommend to drain the body cavity once a year.



Caution

Drain the liquids into a suitable bucket to avoid releasing them to the environment. Keep your working area clean. The cavity can be exposed to line or cavity pressure, wear protective eye wear.

To drain the body cavity, proceed as follows:

1. Operate the valve to the fully open or fully closed position, whichever is more convenient for you.
2. Turn loose the head of the drain fitting (23) located at the bottom of the body, to bleed liquids trapped in the body cavity. We recommend a drain valve be specified for this task.

It will take some time to bleed the body cavity. It depends on the size of the fitting, pressure in the body cavity and compressibility of the fluid.



Caution

If there are hydrates in gas service, the drain fitting may freeze during high-pressure draining. Work slowly and ensure that the pressure trapped in the body cavity has been completely released, by opening and closing the drain fitting several times.

9.0 OVER PRESSURE RELIEF

API6D trunnion mounted ball valves with single piston effect seats (SEP) are designed to automatically release cavity overpressure into the pipeline automatically using “self relieving seats”. Since body cavity and pipeline are isolated in the fully open and fully closed position, pressure trapped in the body cavity may be different than pressure in the line. Examples of this situation are during pipeline de-pressurisation, or heating of body cavity causing a sudden pressure build-up.


Overpressure in the body cavity will pop the seats off the ball surface, and excess pressure will be relieved into the pipeline. After the pop-off action, the seats will return to their normal position, in contact with the ball.

The pop-off action is triggered by differential pressure between body cavity and pipeline. The body cavity pressure should not exceed in 1.33 times the valve pressure rating at the specified maximum operating temperature; however, pop-off action usually happens long before, with just a few bars of differential pressure. For standard API6D ball valves, both seats are self relieving. However, on request valves can be ordered with just upstream or just downstream seat as self relieving. Also “double piston effect” (DPE) seats can be specified. DPE seated valves must have an external relief safety valve fitted to the body which vents to atmosphere. Due to environmental requirements this must now be plumbed back into the upstream side of the valve or recycled elsewhere. Refer section 10.0 for more information.



Caution


Both seats are self relieving hence over-pressure can be relieved up or/and downstream. Custom ‘single piston’ seats can be specified on one side, and ‘double piston’ seats on the other side to allow pressure to only automatically relieve just upstream or just downstream.

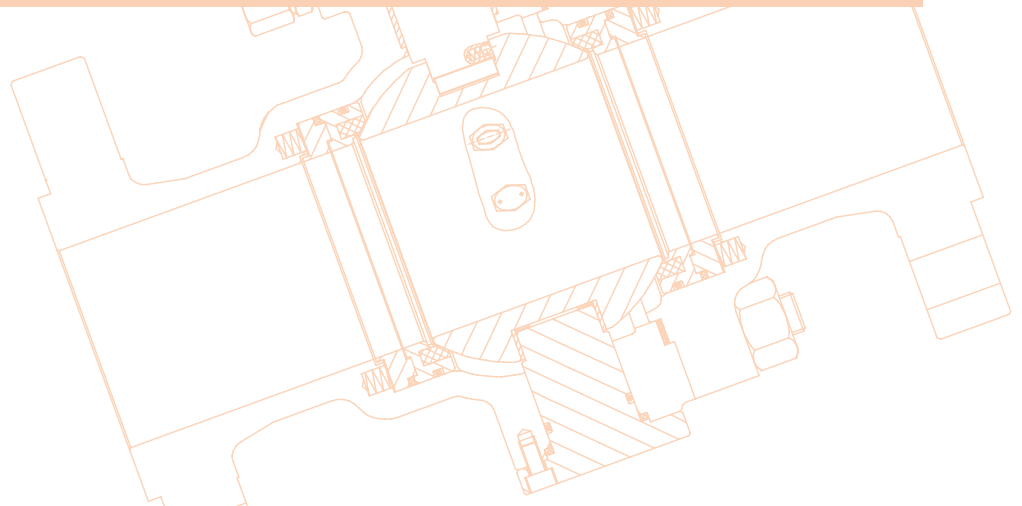

10.0 OVERVIEW DESIGN FEATURES


Piston-action seats

As line pressure increases the seat reacts to the force of the pressure to form an effective seal. In the absence of line pressure, coil springs behind the seat provide a tight seal by keeping the seat in contact with the ball surface. Independent floating spring loaded seats are always in contact with the ball to provide an effective tight seal even at low differential pressure. Independent upstream and downstream seats permit draining of fluid from the body cavity, so allowing double block and bleed operation (closed position only). With the optional single sealing feature, there is automatic body cavity release of over pressure to the line through the downstream seat.

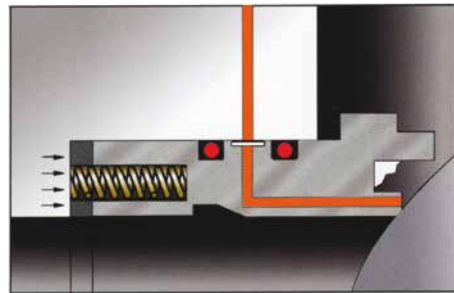


Self relieving seats (standard)

In self relieving condition, excessive internal cavity pressure is automatically relieved both upstream and downstream into the line by excessive pressure forcing the seats away from the ball. Refer Appendix 4 page 29 for more information.

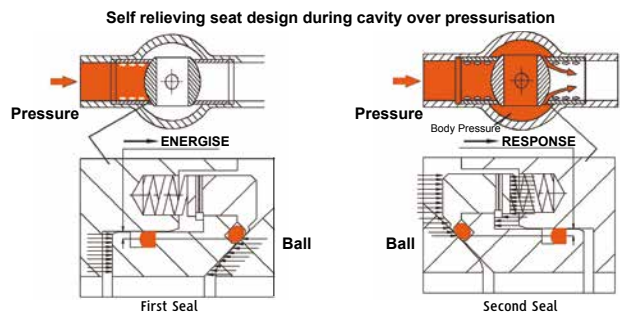

Double piston effect (DPE) seats



With the 'DPE' seat option, if a leakage occurs in the upstream seat, the pressure entering the body cavity pushes the downstream seat against the ball and the valve seals. Line pressure forces a seal against the floating seat.

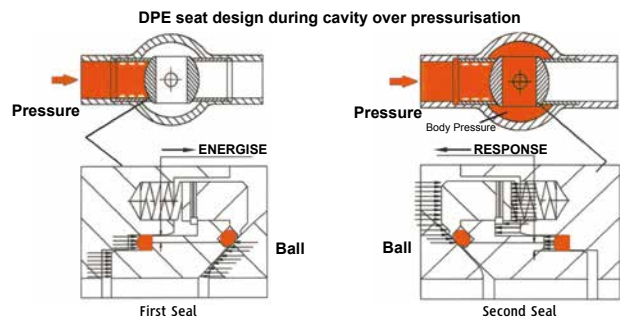

An external body relief valve is installed to protect the body cavity from excess pressure which can be vented to atmosphere or recycled back to the downstream side of the valve or to flare.

Triple barrier stem seal design

Leakage from the stem area is prevented by double barrier sealing with O-rings as well as graphite fire seals. Leakage through the valve body joint is also protected by double sealing with an O-ring and a flexible graphite gasket. After a fire has deteriorated the -rings, graphite packing and secondary seal ensure prevention of external fluid leakage.

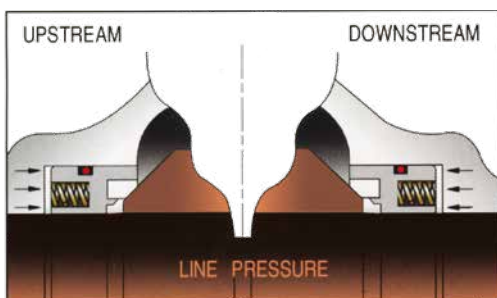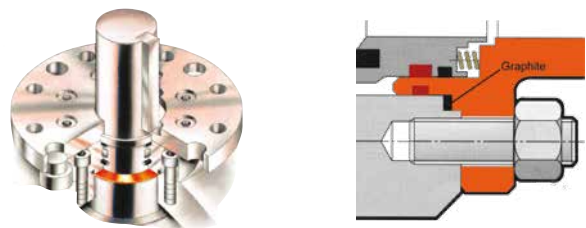


Piston-action seats are standard and provide bi-directional sealing

Double block and bleed

Whether in the open or closed position, pressure on each side of the ball is blocked from the body cavity by the seat ring. The cavity can be blown down or drained (only in the closed position) through the body port to indicate line isolation is effective.

Emergency sealing function

In case of fluid leaks from the seat or stem sealing area, a sealant can be supplied through the injection fitting to temporarily prevent leakage.

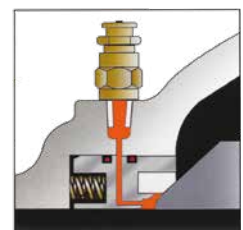

APPENDIX 1


Bolting Torques

TABLE 1

Stud Size	Bolting Material			
	B7M/L7M	B7/B16/L7	B8/B8M CL.1	B8/B8M CL.2
3/8 - 16 UNC	15 (20)	20 (27)	15 (20)	20 (27)
7/16 - 14 UNC	25 (34)	30 (41)	22 (30)	25 (34)
1/2 - 13 UNC	40 (54)	50 (68)	35 (47)	45 (61)
9/16 - 12 UNC	55 (75)	70 (95)	55 (75)	65 (88)
5/8 - 11 UNC	75 (102)	100 (136)	70 (95)	85 (115)
3/4 - 10 UNC	135 (183)	170 (231)	125 (170)	150 (203)
7/8 - 9 UNC	200 (271)	270 (366)	170 (230)	200 (271)
1 - 8 UNC	350 (475)	400 (542)	219 (298)	350 (475)
1 1/8 - 8 UN	500 (678)	520 (705)	256 (398)	450 (610)
1 1/4 - 8 UN	675 (915)	850 (915)	321 (498)	650 (881)
1 3/8 - 8 UN	900 (1220)	1200 (1627)	384 (598)	900 (1220)
1 1/2 - 8 UN	1200 (1627)	1500 (2034)		1200 (1627)
1 5/8 - 8 UN	1600 (2170)	2000 (2712)		1501 (2035)
1 3/4 - 8 UN	2000 (2712)	2500 (3390)		1907 (2585)
1 7/8 - 8 UN	2500 (3390)	3100 (4204)		2357 (3195)
2 - 8 UN	3000 (4068)	3800 (5153)		2876 (2898)
2 1/8 - 8 UN	3600 (4882)	4500 (6102)		
2 1/4 - 8 UN	4400 (5966)	5400 (7322)		

- (1) Torques shown are for A193 B7/B7M/B8/B8M and A320 L7/L7M/B8/B8M.
- (2) Torque tolerance $\pm 10\%$.
- (3) For temperatures above 750°F (400°C) use 75% of the torque values.
- (4) Above torque values are with the bolts lubricated.
- (5) Values above are based on 30,000 psi (206.85 Mpa) bolting stress and lubricated with heavy graphite and oil mixture or a copper based anti-seize grease.
- (6) Do not exceed by more than 25% of values stated when emergency torquing is required.
- (7) All bolts shall be torqued in the pattern as shown in Diagram 1 to ensure uniform gasket loading.
- (8) Optimum torque can vary depending on type of body gasket but do not increase torque more than 10% above those shown.
- (9) Consult us for other bolt material.
- (10) Most B8M and B8 bolts are class 1 so do not assume class 2 unless you are sure.


DIAGRAM 1

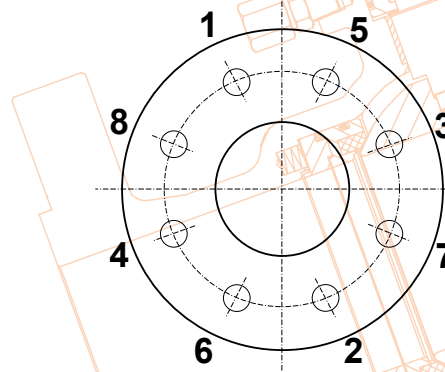

BOLTING TORQUE SEQUENCE: 1 - 2 - 3 - 4 - 5 - 6 - 7 - 8


Stud lubrication

- Re-tightening of body (with system de-pressurisation) bolting is permissible, if body leakage occurs.
- Required Torque values are given in Table .
- Use a Copper-Based Anti-Seize Grease for stud lubrication.



Caution

Bolt tensions shown in Table 1 must be decreased by 25% when other or no lubrication is used. Non lubricated bolts can have an efficiency of 50% less than the torque values stated.




Caution

Indicative torques are shown only, different body gasket systems, different seating styles, different sizes & classes etc., will have different torque requirements. Furthermore, other stud grades can have much lower torques depending if class 1 or class 2, and or above variables.

APPENDIX 2

Label details

DIAGRAM 2

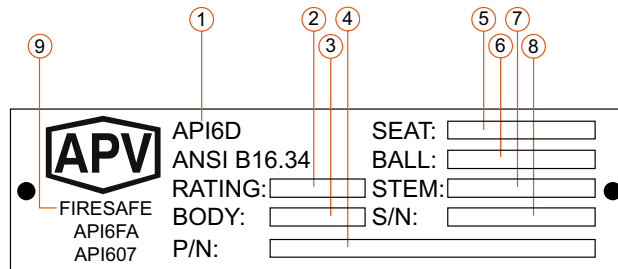

No.	Figure Number Code	Description
1	Standard	Identifies manufacturing design & standard
2	Pressure Classes	Identifies pressure classification per API requirements
3	Body Material	Identifies body material composition (A105, WCB, F51, CF8M, etc.)
4	Figure Number	Identifies the detailed valve configuration (valve type, bore size, pressure class, materials, etc.)
5	Seat Material	Identifies seat material composition (PEEK, Teflon, Nylon, etc.)
6	Ball Material	Identifies ball/disc material composition (A105, 316SS, ENP, etc.)
7	Stem Material	Identifies stem material composition (A105, 410SS, 17-4pH, etc.)
8	Serial Number	Identifies certified manufacturers serial number
9	Firesafe	Identifies firesafe standard
*	Size	Identifies bore size
**	NACE MR0175	Identifies corrosion resistance

* The body size is cast on the body.
 ** NACE is indicated by a separate NACE tag.

APPENDIX 3

Design Features

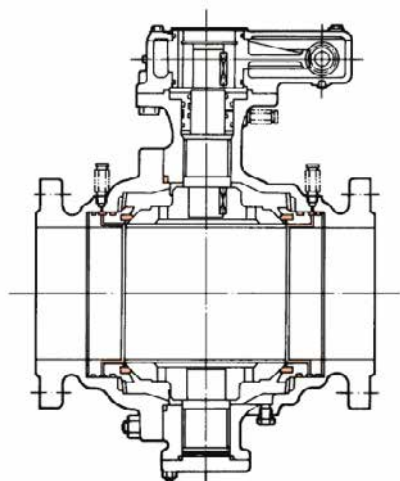


DIAGRAM 3

MANUFACTURING SPECIFICATIONS

Specification	Standards
General design standard	API 6D
Pressure-temperature rating	ASME B16.34
Face to face dimensions	ASME B16.10
Flange type and dimensions	ASTM B16.5
Butt-weld ends	ASME B16.25
Inspection and test	API 6D/API 598/ISO 14313

APV Trunnion Mounted Ball Valve Construction Features Function

Up-stream Sealing Two-way Valve

The up-stream seal of the valve is effected by the advanced spring pre-tightening seats which automatically adjust. The two-way valve has two seats that can be sealed in both directions, so there's no limitations of flow direction during installation. As line pressure increases the seat reacts to the force of the pressure to form an effective seal. In the absence of line pressure, coil springs around the seat unit provide a tight seal by keeping the seat in contact with the ball.

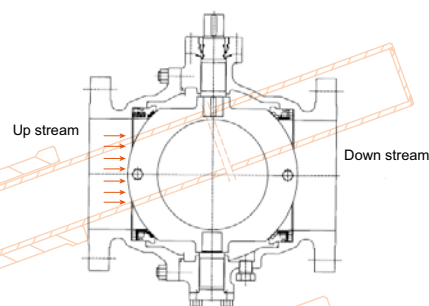


DIAGRAM 4

Double Block & Bleed Valve

Being "up-stream side sealing", the valve can bleed out the trapped fluid in the body cavity when the valve's in fully open or fully closed position. The fluid is intercepted by seats on up-stream and down-stream side. Bleeding the dirty fluid periodically can reduce damage of the sealing surface and prolong the service life of the valve. Once the integrity of the cavity is ensured, the upper stem seal may be replaced under working pressure. However, this depends on the size and class as designs vary. Also prime the stem sealant nipple with emergency sealant before attempting to replace the upper seal.

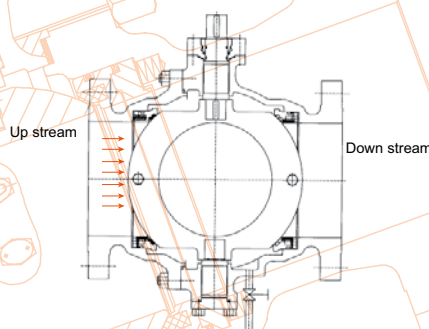


DIAGRAM 5

Automatic Relief of the Cavity

Independent floating spring loaded seats are always in contact with the ball to provide an effective tight seal even at low differential pressures. Independent upstream and downstream seat permit draining of fluid from the body cavity, allowing double block and bleed operation. With the standard 'single sealing' feature, when the valve is closed there is an automatic body cavity release of over pressure to the line through the downstream (or upstream) seat. The pre-tightened seat springs are preset to automatically relieve excess cavity pressure caused by thermal expansion back downstream (or upstream). Once pressure exceeds the API6D (6.8) maximum (1.33 times the valve maximum pressure rating at 38°C at the time of publishing this IOM). Also refer section 10.0 for more information.

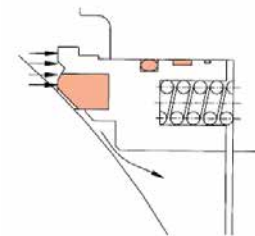


DIAGRAM 6

'Double sealing' feature (available on request), maintains the sealing capacity of the valve even in the case of failure of the upstream seat. Body cavity over pressure in this case can be released through a relief valve to atmosphere or flare, or can be recycled back upstream. A combination of double sealing features on the downstream side and single sealing on the upstream seat is available on request. This configuration maintains the sealing capacity of the valve in case of failure of the upstream seat and release of the body cavity over pressure through the upstream seat.

Full Bore or Reduced Bore

Full bore and reduced bore are available in all sizes. Full bore is full through conduit bore size to API6D to facilitate pigging.

Sealant Injection System

When the seat and/or stem sealing system is damaged, the grease injection valve can inject sealant into the valve for temporary sealing. Under normal circumstances Australian Pipeline Valve valves require no lubrication.

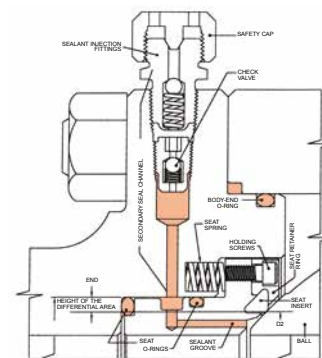


DIAGRAM 7

Stem Sealing System

Two O-rings are utilised in the stem area for reliable performance, as well as graphite fireseal.

Flexible Operation

The seat and stem bearing has a Teflon coating which is low friction and self-lubricates to reduce the valve operation torque.

Operators

The valve may be operated by hand, pneumatic operator, motor, hydro-pneumatic operator and hydraulic operator, etc.

NACE

The full range of APV valves can meet NACE standard MR-01-75, latest edition if necessary.


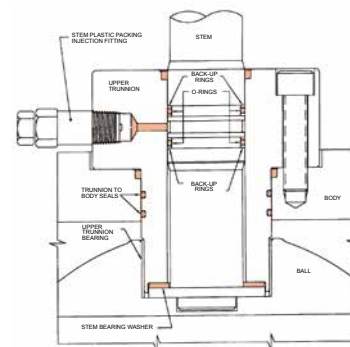


DIAGRAM 8


APPENDIX 4

Standard Materials of Construction*

DIAGRAM 9

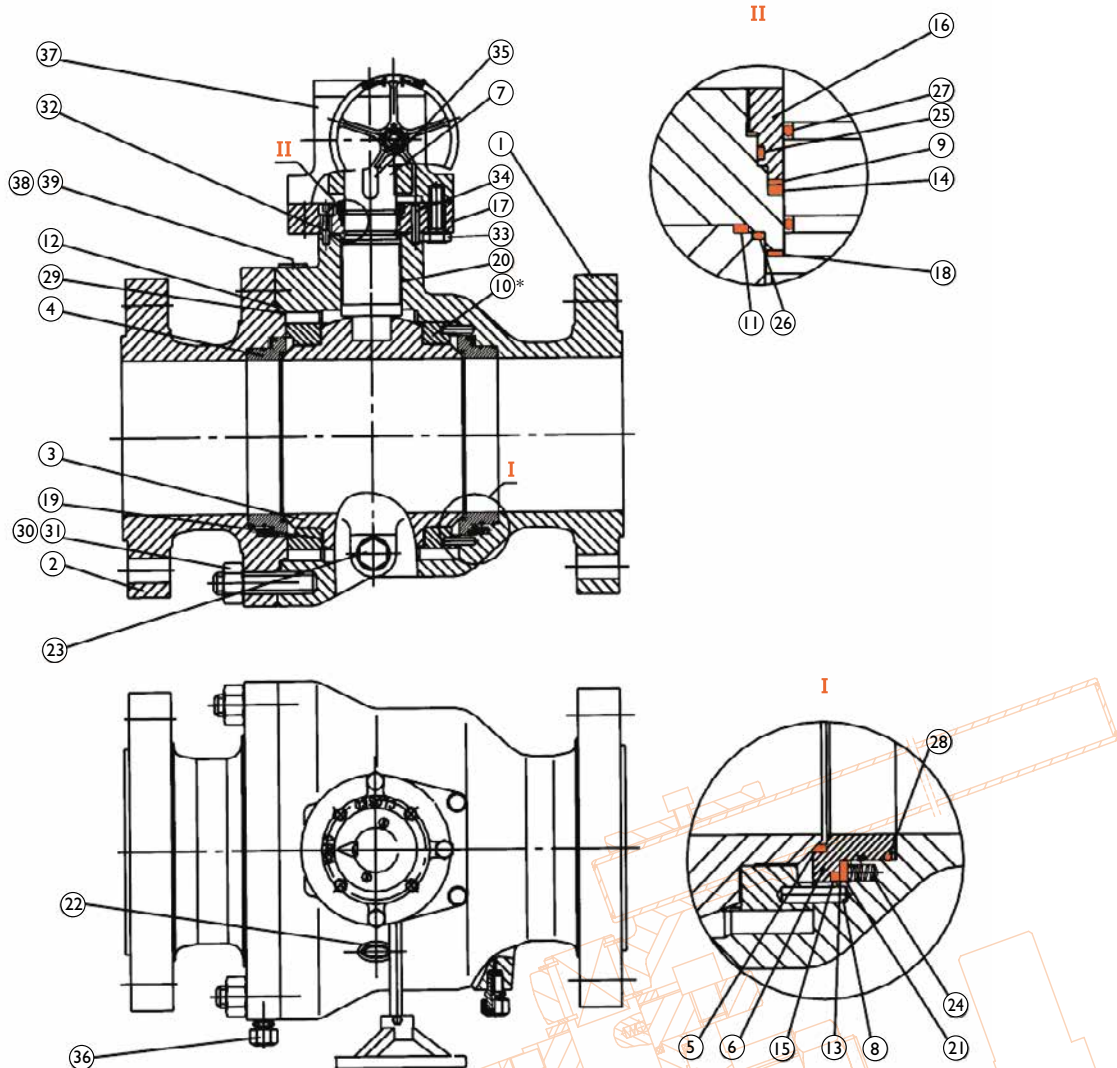

Note: This is only an indicative drawing. Design and parts vary in different classes, sizes & trim. Refer to the as-built drawing supplied with valve data package.
*Internal trunnion shown on larger sizes only, refer to as-built drawing.

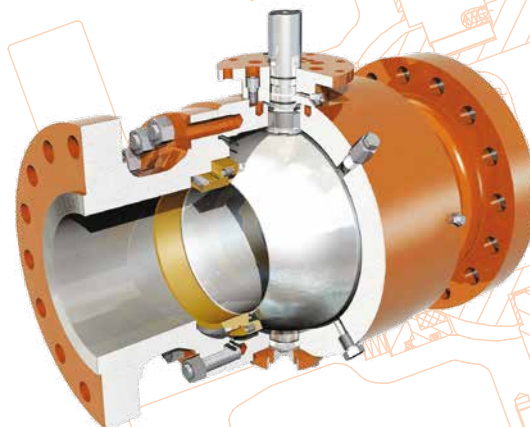

APPENDIX 4 (CONTINUED)

Standard Materials Options - Example

TABLE 2


No.	Parts	Carbon Steel	Stainless Steel	Low Temp Service (-46°C)
1	Body	ASTM A216-WCB	ASTM A351-CF8M	ASTM A352-LCB/LCC
2	Adaptor	ASTM A216-WCB	ASTM A351-CF8M	ASTM A352-LCB/LCC
3	Ball	ASTM A216-WCB/A105+ENP ASTM A351-CF8M	ASTM A351-CF8M ASTM A182-F316	ASTM A352-LCB/LCC/LF2+ENP ASTM A182-F316
4	Seat Assembly	SEE 5,6	SEE 5,6	SEE 5,6
5	Seat Insert	RPTFE/Nylon/Devlon/POM	RPTFE/Nylon/Devlon/POM	RPTFE/Nylon/Devlon/POM
6	Seat Ring	ASTM A105 ENP/F6A/316	ASTM A182-F316/31803	ASTM A182-F304/316/31803
7	Stem	ASTM A276-410 ENP/F6A/316	ASTM A276-316/17-4PH	ASTM A276-304/316/17-4PH
8	Pin	ASTM A276-410 ENP/F6A/316	ASTM A276-316	ASTM A276-304/316
9	Washer	ASTM A276-304/316	ASTM A182-F316	ASTM A182-F304/316
10	Trunnion Support/Trunnion*	ASTM A105 ENP/F6A/316	ASTM A182-F316/17-4PH	ASTM A350-LF2 ENP/316/17-4PH
11	Gasket	316 Spiral Wound Graphite	316 Spiral Wound Graphite	316 Spiral Wound Graphite
12	Gasket	316 Spiral Wound Graphite	316 Spiral Wound Graphite	316 Spiral Wound Graphite
13	Gasket	PTFE	PTFE	PTFE
14	Gasket	Flexible Graphite	Flexible Graphite	Flexible Graphite
15	Gasket	Flexible Graphite	Flexible Graphite	Flexible Graphite
16	Retaining Nut	ASTM A276-410 ENP/316	ASTM A276-316	ASTM A276-304/316
17	Top Flange	ASTM A105/ASTM 182-F316	ASTM A182-F316	ASTM A350-LF2/F316
18	Thrust Plate	RPTFE/316+PTFE/Phenolic GR.L	RPTFE/316+PTFE/Phenolic GR.L	RPTFE/316+PTFE/Phenolic GR.L
19	Trunnion Bearing	A182 F316+PTFE	A182 F316+PTFE	A182 F316+PTFE
20	Trunnion Bearing	A182 F316+PTFE	A182 F316+PTFE	A182 F316+PTFE
21	Seat Follower	ASTM A105 ENP/316	ASTM A182+F316	ASTM A350-LF2 ENP/316
22	Plug/Vent	ASTM A276-316	ASTM A276-316	ASTM A276-316
23	Plug	ASTM A576-1025+ZP	ASTM A276-316	ASTM A276-316
24	Springs	INCONEL X750	INCONEL X750	INCONEL X750
25	O-ring	Viton B/Viton AED/HNBR	Viton B/Viton AED/HNBR/Aflas	HNBR/Elast-O-Lion 985/Viton GLT
26	O-ring	Viton B/Viton AED/HNBR	Viton B/Viton AED/HNBR/Aflas	HNBR/Elast-O-Lion 985/Viton GLT
27	O-ring	Viton B/Viton AED/HNBR	Viton B/Viton AED/HNBR/Aflas	HNBR/Elast-O-Lion 985/Viton GLT
28	O-ring	Viton B/Viton AED/HNBR	Viton B/Viton AED/HNBR/Aflas	HNBR/Elast-O-Lion 985/Viton GLT
29	O-ring	Viton B/Viton AED/HNBR	Viton B/Viton AED/HNBR/Aflas	HNBR/Elast-O-Lion 985/Viton GLT
30	Stud	ASTM A193-B7+ZP ASTM A193-B7M+ZP	ASTM A193-B8/B8M	ASTM A350-L7+ZP ASTM A320-L7M+ZP
31	Nut	ASTM A194-2H+ZP ASTM A194-2HM+ZP	ASTM A194-8/8M	ASTM A194-4+ZP ASTM A194-7M+ZP
32	Screw	ASTM A194-2H+ZP ASTM A194-2HM+ZP	ASTM A193-B8/B8M	ASTM A320-L7+ZP ASTM A320-L7M+ZP
33	Bolt	ASTM A194-2H+ZP ASTM A194-2HM+ZP	ASTM A193-B8/B8M	ASTM A320-L7+ZP ASTM A320-L7M+ZP
34	Pin	ASTM A576-1045	ASTM A276-304/316	ASTM A276-304
35	Key	ASTM A576-1045	ASTM A276-304/316	ASTM A276-304
36	Injection Fitting Assembly	316 SS	316 SS	316 SS
37	Gear Operator	Iron Case	Iron Case	Iron Case
38	Name Plate	Stainless Steel	Stainless Steel	Stainless Steel
39	Rivet	Stainless Steel	Stainless Steel	Stainless Steel

Note: Other trim materials are optionally available, this B.O.M. is indicative only, parts do vary according to trim, size & class, refer to as-built drawing


APPENDIX 4 (CONTINUED)

Exploded View

DIAGRAM 10

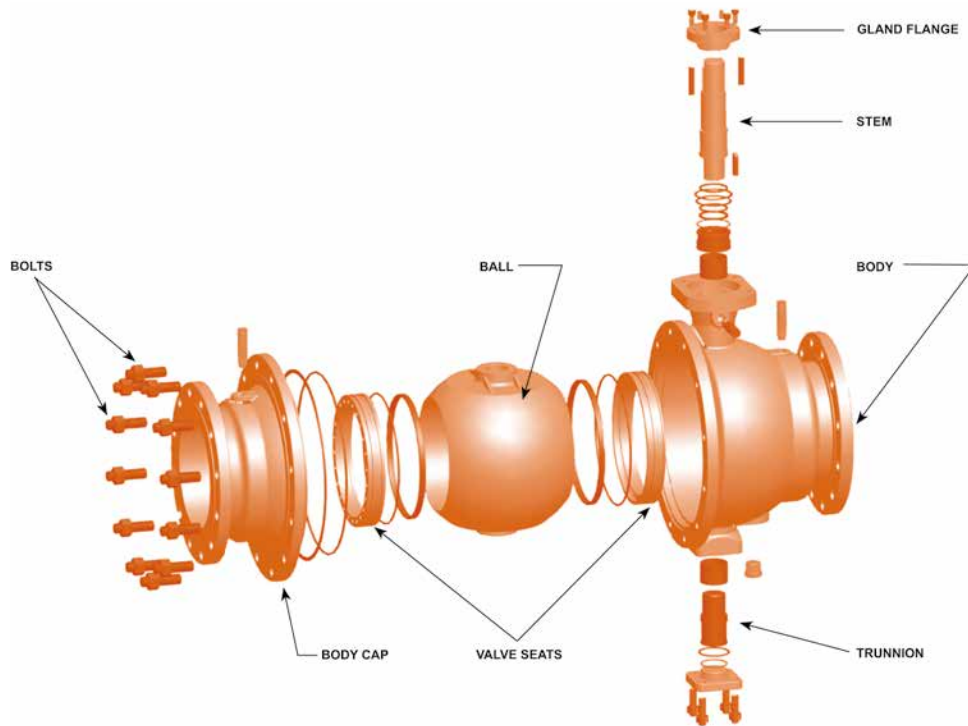

(TYPICAL ONLY, DIFFERENT SIZES & CLASSES WILL VARY)

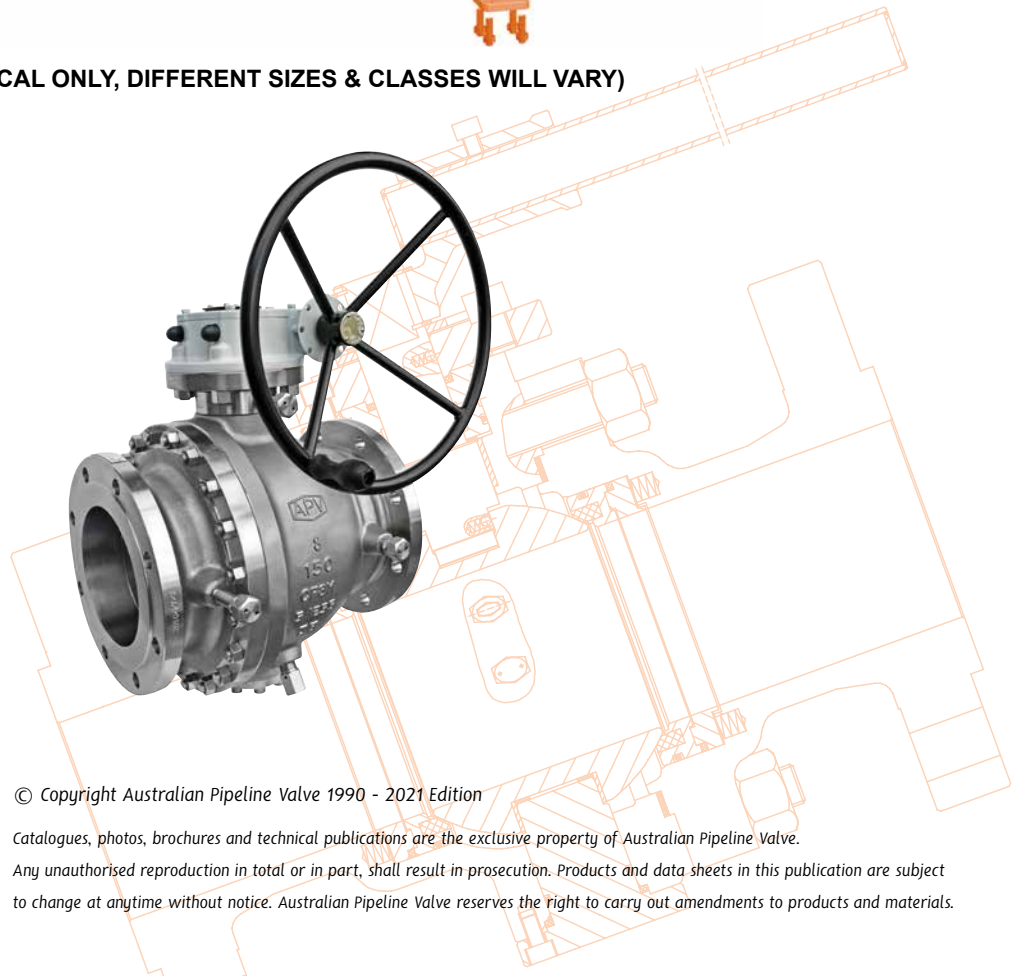

© Copyright Australian Pipeline Valve 1990 - 2021 Edition

Catalogues, photos, brochures and technical publications are the exclusive property of Australian Pipeline Valve.

Any unauthorised reproduction in total or in part, shall result in prosecution. Products and data sheets in this publication are subject to change at anytime without notice. Australian Pipeline Valve reserves the right to carry out amendments to products and materials.



AUSTRALIAN PIPELINE VALVE®

ADELAIDE • BRISBANE • PERTH



AUSTRALIAN PIPELINE VALVE® HEAD OFFICE
70-78 Stanbel Road Salisbury Plain South Australia 5109 Telephone +61 (0)8 8285 0033 Fax +61 (0)8 8285 0044
email: admin@australianpipelinevalve.com.au

www.australianpipelinevalve.com.au

LOCAL DISTRIBUTOR/AGENT

If you have any requirements in the field of valves, please contact us for a prompt response. Continuous development of Australian Pipeline Valve products may necessitate changes in the design or manufacture process. Australian Pipeline Valve reserves the right to effect any such changes without prior notice.

